

UltraDeck[®]

Rustic™

Installation:

- 1** Cut post sleeve to proper length. For installation of post caps, the post sleeve must be 1" taller than the 4x4 treated post.
- 2** Ensure that 4x4 treated post is plumb and level.
- 3** Slide post sleeve over the 4x4 treated post. Be sure and slide the ring base to the bottom before installing the rail section. Post sleeves are fastened when spindles are secured to posts.
- 4** Attach post cap after rail is installed. A silicone adhesive may be used to secure the post cap.

Instructions continued on
back of page.

4' ULTRADECK POST KIT

- 112-0972 Rustic Gray**
- 112-0979 Rustic Cedar**
- 112-0985 Rustic Hickory**
- 112-0993 Rustic Redwood**

UltraDeck Post kits cover, protect,
and beautify 4x4 posts

DIMENSIONS:
4.25" x 4.25" x 48"




Kit Includes:

- 1 Post Sleeve designed for use over 4x4 treated post - Not included.
- 1 Ring Base
- 1 Post Cap

**Matching Rail & Stair
Rail Kits also available.**

Recommended Tools:

- Safety Glasses
- Tape Measure
- Chop Saw
- Square
- Level

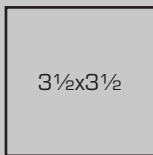

Note: UltraDeck Post Sleeves are designed to fit over dimensional 3 1/2"x3 1/2" posts. If the 3 1/2"x3 1/2" posts you are using are outside of standard, trimming or shimming of the 3 1/2"x3 1/2" edges may be required. Check fit of the 3 1/2"x3 1/2" post into the Post Sleeve prior to attaching it to your deck structure and make any changes to the 3 1/2"x3 1/2" if needed. Post sleeves are available in 48" length. Since decking and railing components are extruded products and post cap and ring base components are injection molded, each will fade at a different rate.

Questions?

**Contact us by chat or email at
www.UltraDeck.com**