


Pinnacle Bracket Installation Instructions


Step 1) Set rail assembly in place. Using a 1/8" drill bit to hold parts A and B of hinge together, transfer hole location of hinge to both post and rail assembly for pre-drilling. See Figure 1. Repeat this step for all four corners of rail assembly. It is important to be accurate when marking holes so brackets line up in the following steps.



Step 2) Remove rail assembly from stairs and with a 1/8" drill bit pre-drill both the rail assembly and post at marked locations. See figure 2.

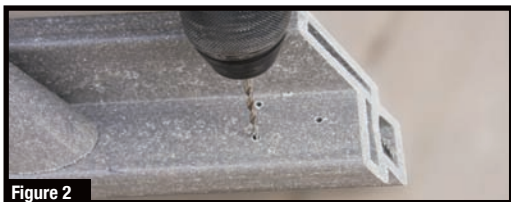

Step 3) Attach hinge bracket to both the post sleeve and rail assembly at all 4 corners with screws supplied with hinge. See figure 3. Do not over tighten, as this will make it hard to line up bracket parts A and B in following steps.

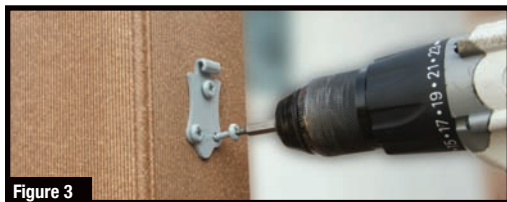

Step 4) Set rail assembly in place and line up hinge parts in all four corners. With hinge aligned, start tapping supplied roll pin into place using a small hammer. See figure 4. Finish tapping pin in with a pin punch. See figure 5.



Please note: If hinge alignment is slightly off from marking of holes in step 1, it may be necessary to have help holding rail in place while inserting roll pin.